


Automatic Water Bowl Wall Mount Kit Installation Instructions

List of Parts Included:

1. Matching “L” Brackets (2)
2. Bolt with Nut and Lock Washer (2 sets)
3. Lag Screws (4)
4. PVC Nipple (1)
5. Brass Hose Adaptor (1)
6. Rubber Washer (1)

Items Needed for Installation:

1. Teflon Plumbing Tape
2. Adjustable Wrenches
3. Drill for pilot holes

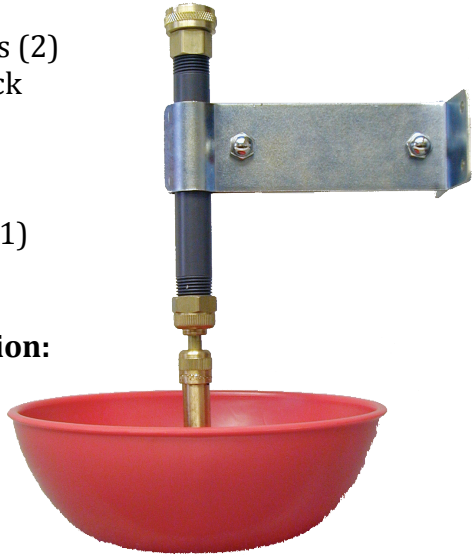

Installation Instructions:

1. Wrap both ends of the PVC Nipple with Teflon Plumbing Tape (not included).
2. Screw one end of PVC Nipple to Brass valve that came with the water bowl.
3. Screw Brass Hose Adaptor to the other end of PVC Nipple.
4. Place “L” Brackets together with PVC Nipple in between. Use bolts, nuts, and lock washer to secure.
5. Attach bracket to a wall or post 6” to 12” off of the ground with the 4 lag screws. Height can be adjusted after mounting by loosening the bolts and moving the PVC Nipple up or down within the bracket.
6. Place rubber washer into Brass Hose Adaptor and attach hose.

Murray McMurray Hatchery, Inc.

www.mcmurrayhatchery.com

800.456.3280